myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for LOGITECH HARMONY 525. You'll find the answers to all your questions on the LOGITECH HARMONY 525 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LOGITECH HARMONY 525
User guide LOGITECH HARMONY 525
Operating instructions LOGITECH HARMONY 525
Instructions for use LOGITECH HARMONY 525
Instruction manual LOGITECH HARMONY 525

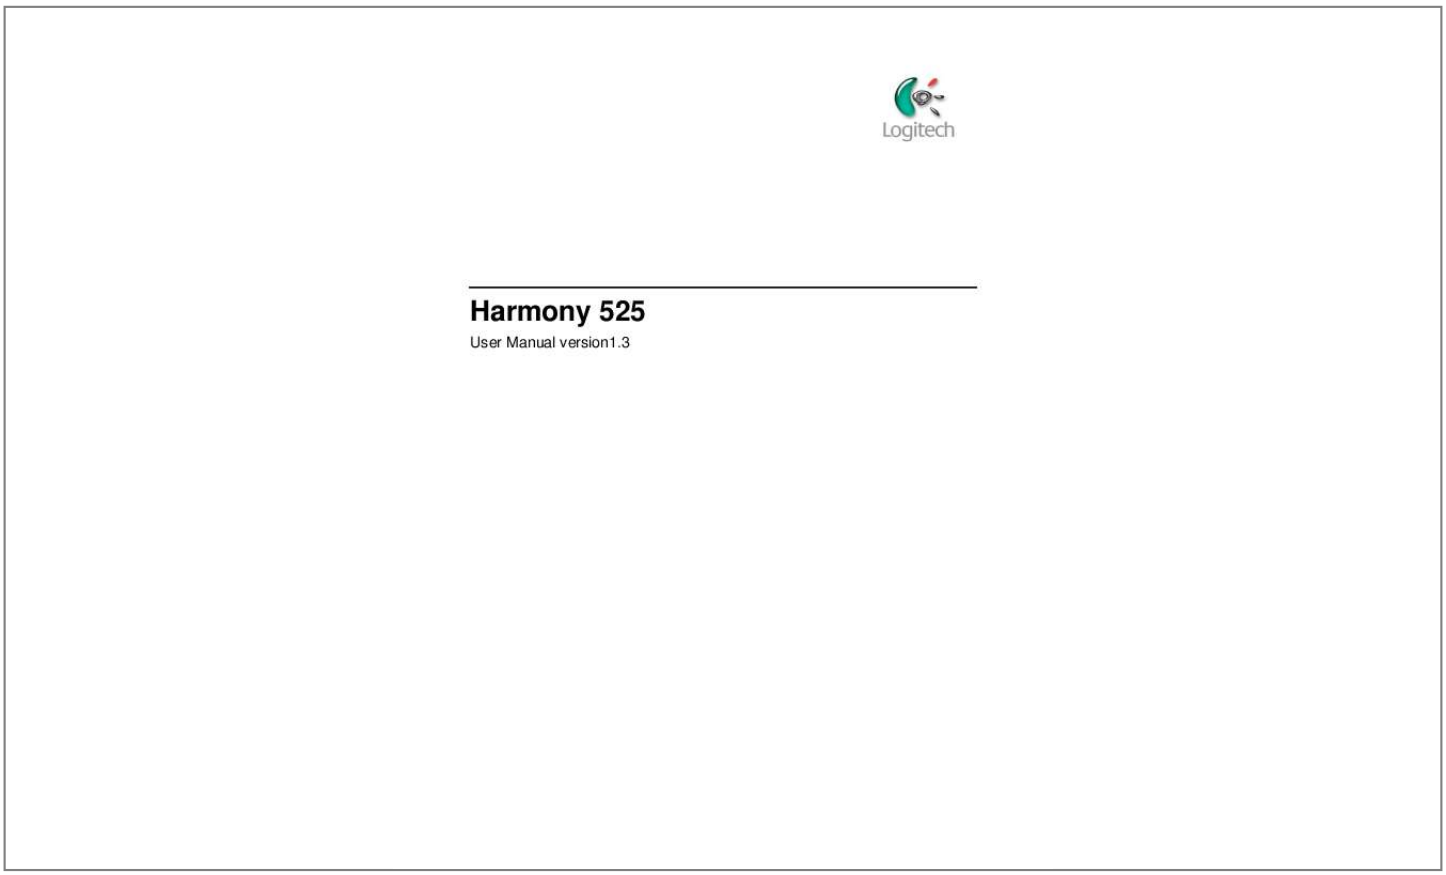

Your user manual
LOGITECH HARMONY 525

Manual abstract:

Display: Shows a list of your Activities and devices, help, infrared (IR) commands and any available listings. Display Buttons: Use the buttons at the side of the display to select the corresponding command. Left/Right Arrow: Allows you to view more options on the display. Guide: Gives you access to view program listings, if you have a device with this feature. Info: Gives you additional information on program listings, if you have a device with the Guide feature. Exit: Exits from the Guide feature. Menu: Gives you access to the menu system on a device, if you have a device with this feature. Prev: Goes to previous television channel. Glow: Turns on and of the backlight on the Harmony remote. Teletext Buttons: This is a service provided by the television provider.
Use the Teletext buttons to access this service; however, your TV set must be equipped with a Teletext decoder. While Teletext is the default setting for these buttons in the Watch TV Activity, you can customize these buttons to send different commands. Infrared Learning Port: The Harmony remote uses this port to learn commands from your original remote. v. 1.
3 page 2 Harmony 525 User Manual Beginning the Online Setup Process Once you have installed the Logitech Harmony Remote Software, connect your remote and you will be guided through a series of question-and-answer steps to complete each of the five main steps of the online setup process: 1. Login Information: Create your login information. 2. Check Connection: Ensures your computer and your Harmony remote are communicating properly. 3. Set Up Devices: Helps you provide us with information about the devices in your personal home theater system. 4. Set Up Activities: Helps you provide us with information about the way your devices work together to perform Activities (e.g. Watch Television Activity). 5. Update Remote: Updates your remote with your personal settings Note: When using the Harmony Remote Software, click More Help to view specific help for the step you are on. v. 1.3 page 3 Harmony 525 User Manual Using Your Harmony Remote This section provides you with information that will help you use your remote.

Using the Glow Button Press the Glow button to light up or turn off the display backlight. To determine the length of time the backlight stays on. Note: Shaking or tilting the Harmony remote will not light up the display backlight. Users must press the Glow button to light up the display backlight. The remote will go into Deep Sleep mode when the remote detects no motion for two hours. The remote will begin motion sensing in Deep Sleep mode, and any motion or movement in front of the remote will trigger the glow. Use the Harmony Remote Software to enable/disable these features. Displaying Help on Your Harmony Remote From time to time when you select an Activity, the Activity may not work. This can happen when the Harmony remote sends many infrared commands to set up all your devices for an Activity, but one or more devices are not receiving some commands. The Harmony remote is then "out of sync" with your devices (e.
g. it thinks one of your devices is on, but it is turned off). Some of the reasons the Harmony remote can become "out of sync" with your system are: · · · · Someone walks between the Harmony remote and your entertainment system while an Activity is starting. You point your Harmony remote away from your system while an Activity is starting. There is an object blocking the line-of-sight between your Harmony remote and the system.
You are very far away from your entertainment system. You will need to use the Help button on your Harmony remote to resynchronize the remote with your devices. Before resynchronizing, ensure the cause of the problem has been addressed. Example Remove all obstructions so that the entertainment devices can receive the infrared commands from the Harmony remote. To resynchronize: 1.
Press the Help button. 2. Answer the questions on the remote's display by selecting Yes or No. If you answer no to any question, the Harmony remote will resend the necessary command and ask you the same question again. v. 1..

Your user manual
LOGITECH HARMONY 525